

## Comparison list Li Ion- batterypacks Video/Camcorder

Camera type	Voltage	Original batterypack	Ansmann batterypack	Digi Charger adapter plate
<b>Canon</b> MX 20i / 25i / 30i / 35i MX 200i / 250i MV X 20i / 25i MV 4i / 4i MC	7,2 V	Canon NB 2 L	A-Can NB 2 L 5022243	A - Adapter
<b>Canon</b> MV 30 / 30i MV 300 / 300i MV 400 / 400i / 430i / 450i / 450i	7,2 V	Canon BP 511	A-CAN BP 511 5022283	Basic charger
<b>Canon</b> MV 600 / 600i / 630i / 650i MV 700 / 700i / 730i / 750i MV X 100i / 150i X 1i / 2i / 3i MV 30 / 30i	7,2 V	Canon BP 522	not in our product range	Basic charger
<b>Canon</b> MV 600 / 600i / 630i / 650i MV 700 / 700i / 730i / 750i MV x 100i / 150i X 1i / 2i / 3i MV 30 / 30i	7,2 V	Canon BP 535	not in our product range	Basic charger
<b>Canon</b> XL 1s XM 2	7,2 V	Canon BP 915	not available	Basic charger
<b>Panasonic</b> VDR M 50 / 70 GS 10 / 22 / 30 / 55 / 70 / 200	7,2 V	Panasonic CGA-DU 07 E/ 1B	A Pan - DU 07	Universal adapter

<b>Panasonic</b> VDR M 50 / 70 GS 10 / 22 / 30 / 55 / 70 / 200	7,2 V	Panasonic CGA-DU 14 / 1B	A-Pan - DU 14	Universal adapter
<b>Panasonic</b> VDR M 50 / 70 GS 10 / 22 / 30 / 55 / 70 / 200	7,2 V	Panasonic CGA-DU 21	A-Pan DU 21	Universal adapter
<b>JVC</b> GR-DX 25 / 27 / 35 / 45 / 55 / 75 / 95 GR-DX 100 / 300 / 700 GR - DVP 1 / 3 / 5 / 8 / 9	7,2 V	JVC BN-V 107 US	not in our product range	not available
<b>JVC</b> GR-DX 25 / 27 / 35 / 45 / 55 / 75 / 95 GR-DX 100 / 300 / 700 GR-DVP 1 / 3 / 5 / 8 / 9	7,2 V	JVC BN-V 114 US	A-JVC BN-V 114	not available
<b>JVC</b> GR-DLV 160 / 167 / 365 / 367 / 450 / 567 / GR-DLV 765 / 767 / 865 / 867 GR-DV 400 / 500 / 700 / 1800 / GR-DV 2000 / 3000 / 4000 GR-D 20 / 21 / 22 / 23 / 30 / 40 / GR-D 50 / 53 / 60 / 70 GR-D 73 / 93 / 200 / 220 / 230	7,2 V	JVC BN-V 416	A-JVC BN-V 416	Basic charger
<b>JVC</b> GR-DLV 160 / 167 / 365 / 367 / 450 / 567 / GR-DLV 765 / 767 / 865 / 867 GR-DV 400 / 500 / 700 / 1800 GR-DV 2000 / 3000 / 4000 GR-D 20 / 21 / 22 / 23 / 30 / 40 GR-D 50 / 53 / 60 / 70 GR-D 73 / 93 / 200 / 220 / 230	7,2 V	JVC BN-V 428	A-JVC BN-V 428	Basic charger
<b>Sharp</b> VL Z 1s / 3s / 5s / 7s VL Z 100s / 300s / 500s / 700s 800s 7 950s	7,4 V	Sharp BT-L 226	not in our product range	B-Adapter

<b>Sharp</b> VL PD 5 / 6 VL WD 250s / 450s / 650s	7,4 V	Sharp BT-L 222	not in our product range	B-Adapter
<b>Sharp</b> VL PD 5 / 6 VL WD 250s / 450s / 650s	7,4 V	Sharp BT-I 441	not in our püroduct range	B-Adapter
<b>Sony</b> DVD 100 / 200 DVD 91 / 101 / 201 DCR TRV 950 DCR PC 330 DCR HC 14 DCR TRV 12 / 14 / 19 / 22 / 33 DCR TRV 255 / 265 / 460 CCD TRV 228 / 428	7,2 V	Sony NP-FM 50	A-Son NP-FM 50 5022573	Basic charger
<b>Sony</b> DVD 100 / 200 DVD 91 / 101 / 201 DCR TRV 950 DCR PC 330 DCR HC 14 DCR TRV 12 / 14 / 19 / 22 / 33 DCR TRV 255 / 265 / 460 CCD TRV 228 / 428	7,2 V	Sony NP-QM71 D	A-Son NP QM 71 D	Basic charger
DVD 100 / 200 DVD 91 / 101 / 201 DCR TRV 950 DCR PC 330 DCR HC 14 DCR TRV 12 / 14 / 19 / 22 / 33 DCR TRV 255 / 265 / 460 CCD TRV 28 / 428	7,2 V	Sony NP-QM91 D	not in our product range	Basic charger
<b>Sony</b> DCR PC 106 / 107 / 109 DCR IP 1	7,2 V	Sony NP-FF 51	A-Son NP-FF 51	not available

<b>Sony</b> DCR PC 106 / 107 /109 DCR IP 1	7,2 V	Sony NP-FF 71	A-Son NP-FF 71	not available
<b>Sony</b> DCR-HC 20 / 30 / 40 DCR-HC 85 DCR-HC 16 / 18 / 20 / 30 / 40	7,2 V	Sony NP-FP 50	A-Son NP-FP 50	not available

yellow: ANSMANN batterypack projected